




# Sony Cyber-shot DSC-W800 LCD Screen Replacement

Replace the malfunctioning LCD Screen on your Sony Cyber-shot DSC W800. This should restore your device to its default operating condition.

Written By: Thomas Campo

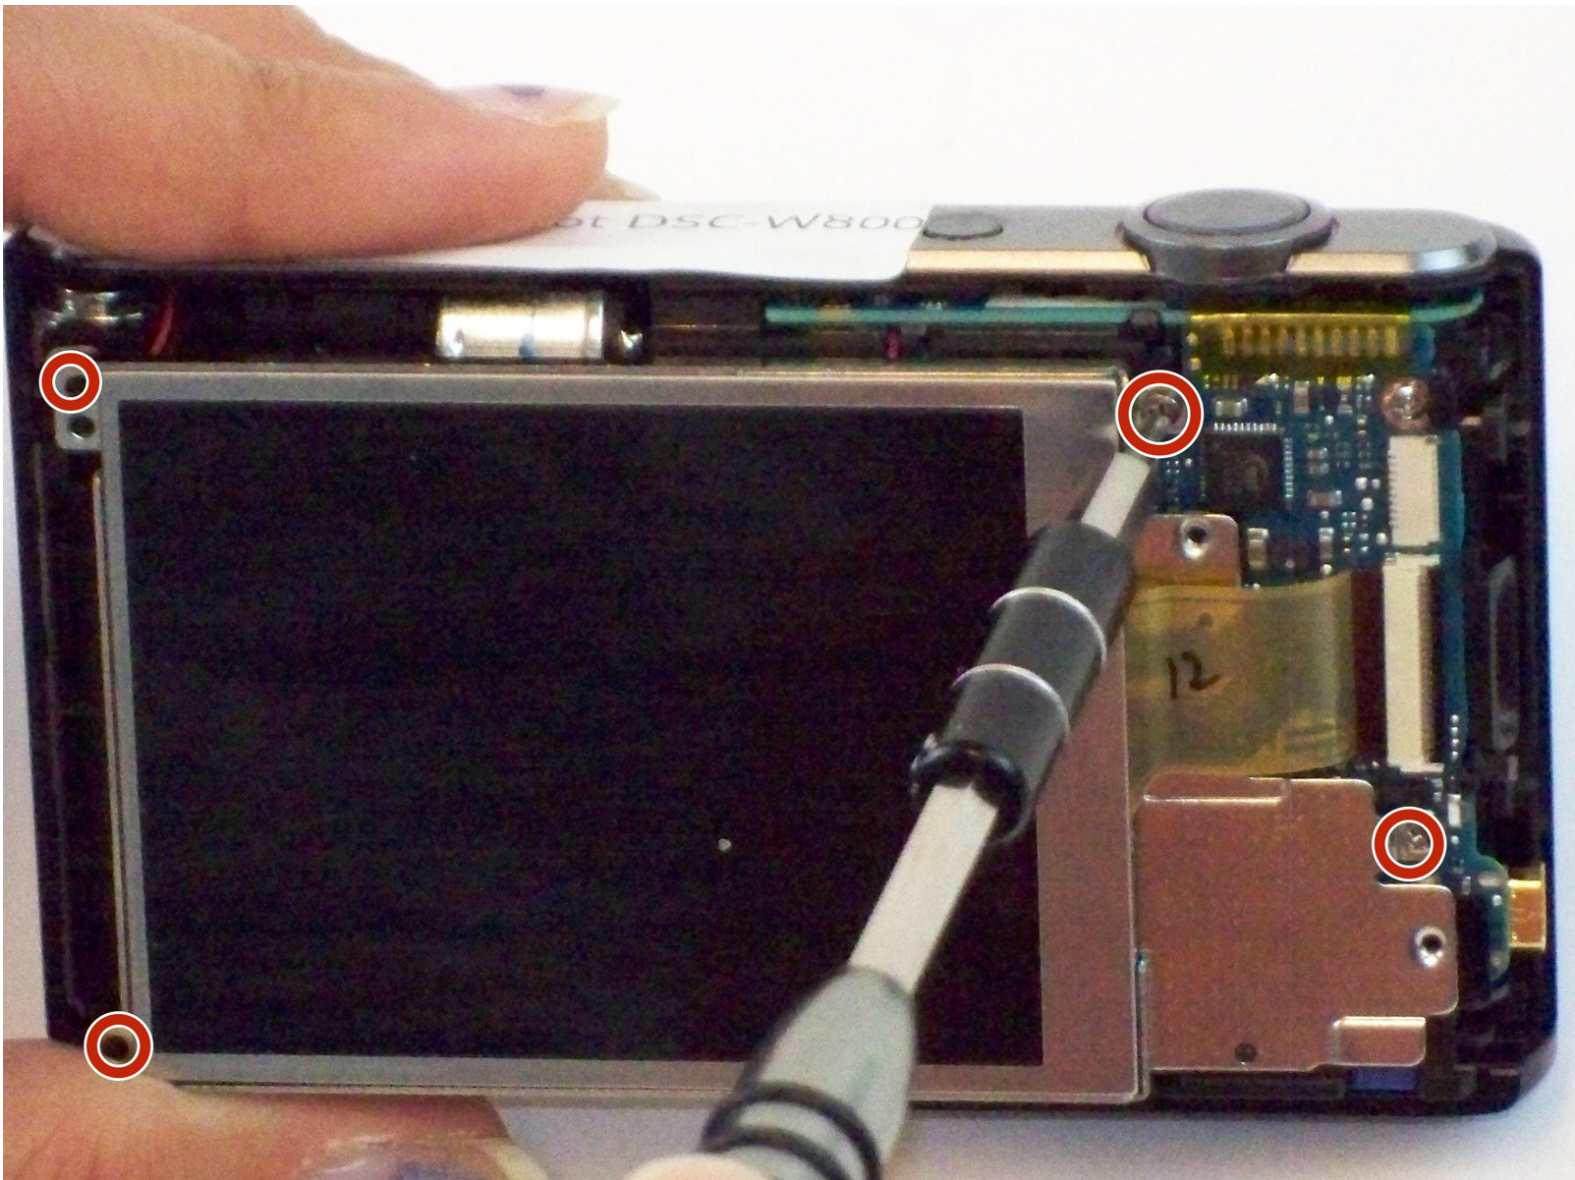

## INTRODUCTION

Some things to consider before you work on the Sony Cyber-shot DSC W800 to replace the LCD Screen:


- The LCD Screen is an integral part of the device and any improper handling can cause issues in other parts of the camera.
- Be cautious when removing ribbon wires.
- Be sure to keep track of all pieces that are taken apart.



### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Button Board

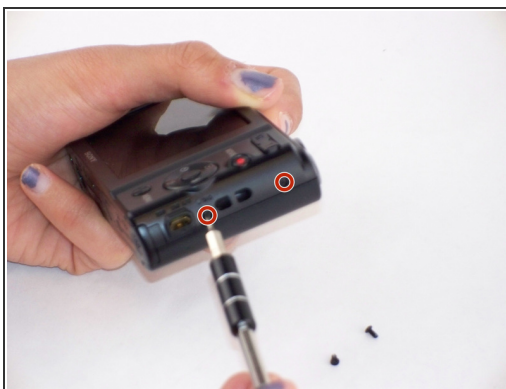

- Remove the five 4.0 mm Phillips #000 screws on the back panel.


## Step 2



- Using the Spudger, remove the back panel from the device.
- The loose piece circled in the picture will most likely fall off the camera housing.




### Step 3

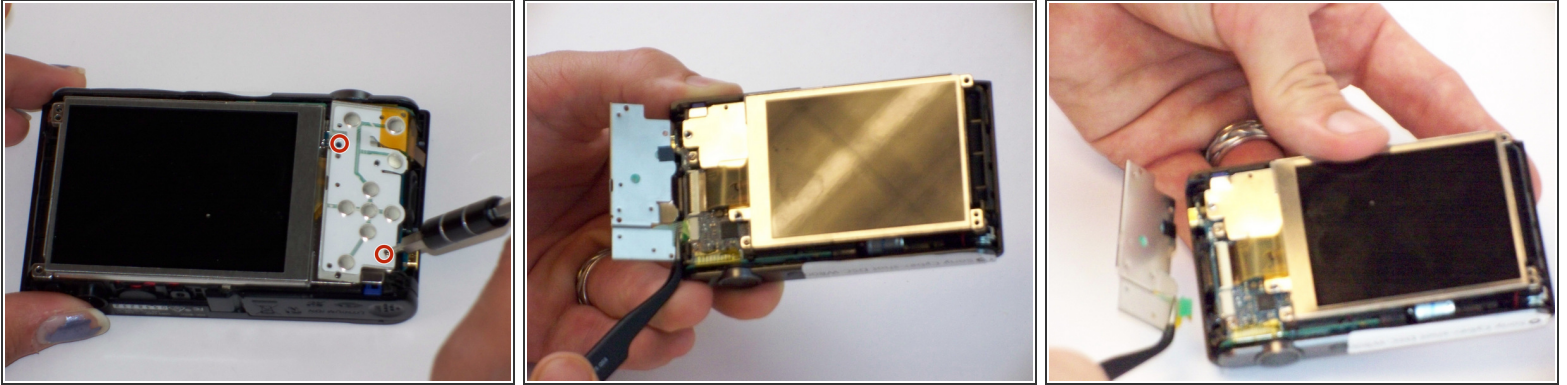

- Remove the two 2.15mm Phillips #000 screws from the circuit board.
- Gently pull on the ribbon wire from ZIF connector with the tweezers to remove the button board.


⚠ Ribbon wires can easily be damaged.

### Step 4 — LCD Screen

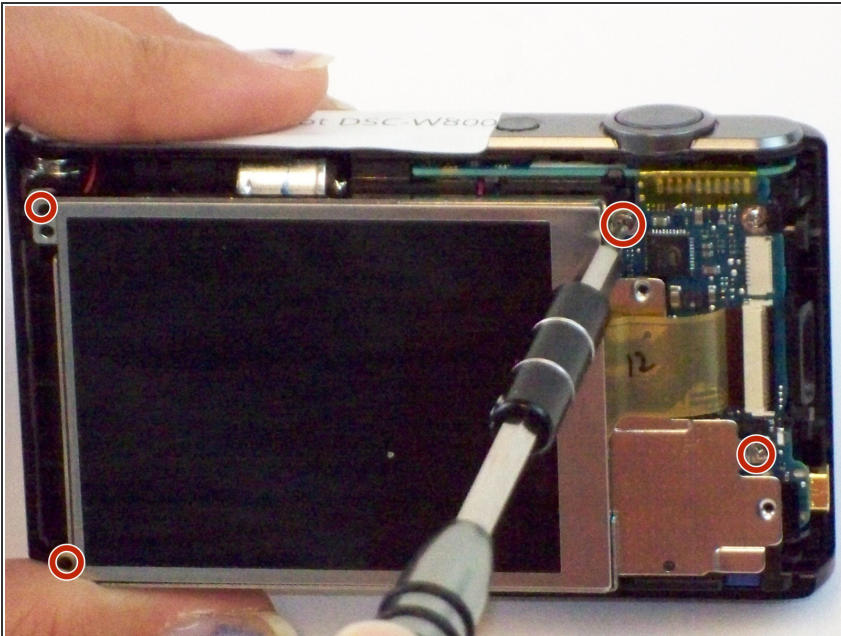



- Remove the four 3.75 mm Phillips #000 screws from the LCD back panel.

## Step 5

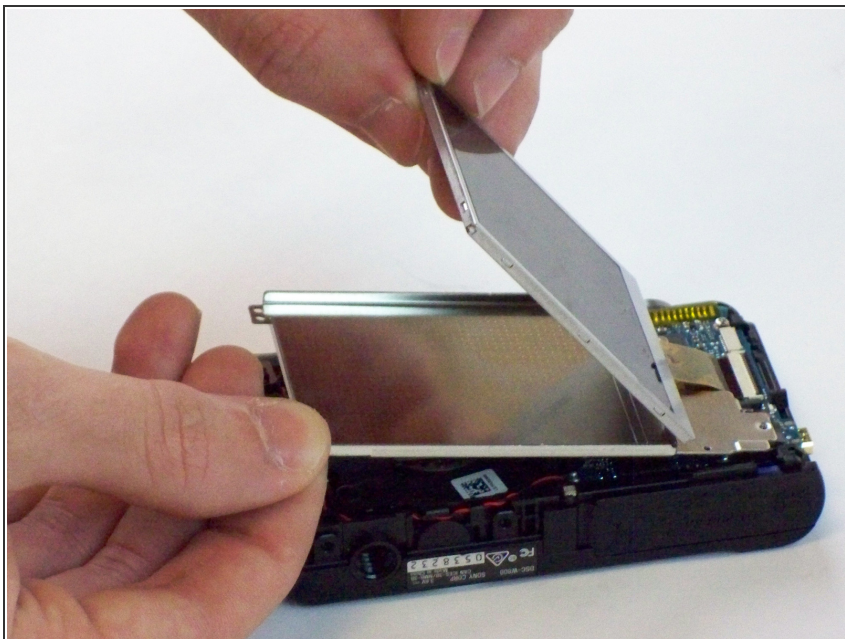

- Lift the back panel and separate the LCD Screen by prying it up.
- Remove the back panel.

## Step 6

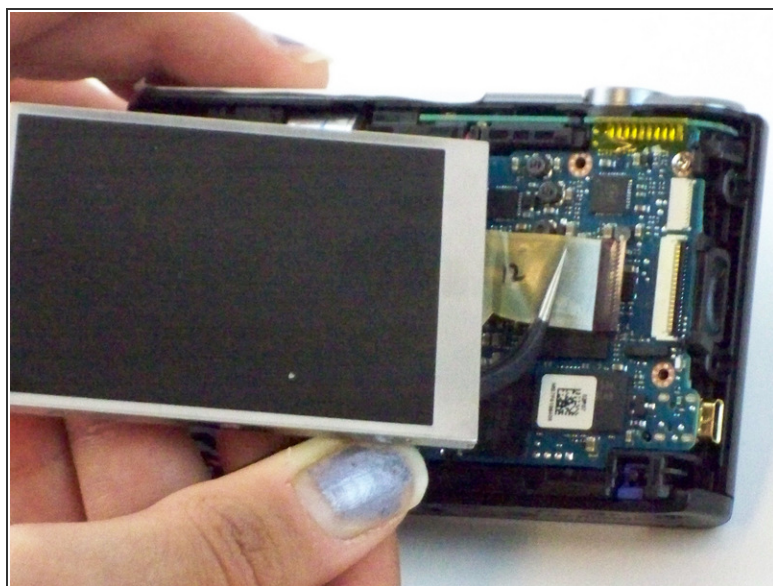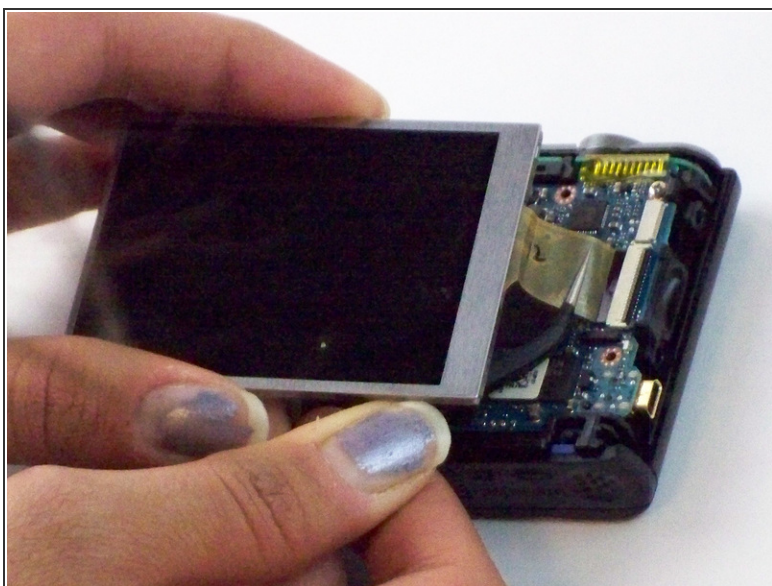

- Gently pull on the ribbon wire disconnecting from the ZIF connector (connecting the LCD screen to the motherboard) with the tweezers.

⚠ Ribbon wires can be easily damaged.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:02:50 PM.